
INSTALLATION AND USAGE INSTRUCTIONS OF VISPOOL PRODUCTS


ATTENTION! Plumbing preparation and connection should be performed by qualified experts. Person installing the article is responsible for correctness and quality of installation. We ask to pay attention to how important it is to install the article correctly for safety of operation and for further full warrantee service.

Before installation of the product, floor and walls should be prepared. The corner where the product will be located as well as the angle between the wall and the floor should be 90°. Otherwise gaps can form and difficulties can arise during installation.

- If you have decided to install a bath or shower tray with a decorative panel, place for the bath or shower support should be selected so that during installation and exploitation the decorative panel can be easily adjusted and removed.
- If the product is to be installed on feet, install them after removing the wooden parts meant for protection of plumbing during transportation.
- Install the drain/overflow device of plumbing.
- Measure the height of the decorative panel (feet of the panel should be screwed in fully, two types of panels are available Nr. 1 and 2). Install the plumbing in the planned place. Set the height of the plumbing according to the measured height of the decorative panel so that the height under the baths edge is equal with the height of panel plus 5–8 mm space (if panel is planned).

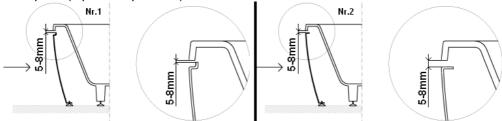

- Place the plumbing in level with a level gauge so that the water can completely discharge. First install the decorative panel for testing (if one is planned). If there are problems, remove the panel and adjust the height of plumbing.
- Connect the siphon with the sewer-pipe by means of appropriate transition connections.
- Install the decorative panel (if one is planned). Screw out the feet of the panel so that the panel would rise and fix in place.

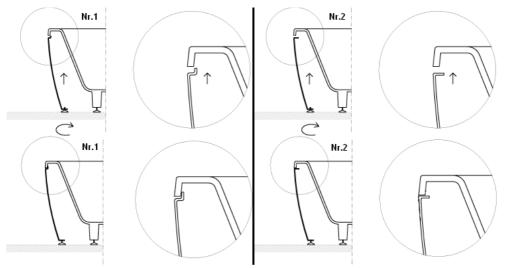

- Fill the gaps between the edge of the product and the wall with sealing materials.
- After use the plumbing should be rinsed with warm water. If necessary, you can wash with a liquid cleaning agent and wipe with a soft cloth.
- Never use abrasive cleaning agents, especially acids, acid-based as well as alkaline or rough cleaning agents.
- Avoid from mechanic damages to the plumbing strong impacts and scratches.

• Do not allow swift changes of temperature (especially, if water is warmed up with a boiler). For example – in winter do not rapidly fill a cooled bath with boiling water, it's advisable to warm up the bath gradually.

SIA Vispool fails to assume responsibility for potential harm the plumbing could do directly or indirectly to persons, pets or property in case it has happened due to noncompliance with installation and usage instructions and conditions of the article.

INSTALLATION INSTRUCTION OF MASSAGE BATH

ATTENTION!!! It is strictly **FORBIDDEN** to lift or place the product while holding on to the pipes or accessory details (details of massage system, towel holder, etc.). We suggest unpacking the product where it will be installed. It's advisable that the electric connections are made by a qualified electrician

- Before installation of the bath, floor and walls should be prepared. The angle between the wall and floor where the bath will be placed should be 90°.
- The front bath panel should be freely removable and installable.
- Place under the bath should be arranged so that there are no obstacles to the details of massage system.
- All installation materials (cable, silicone, leads, etc.) are purchased by the purchaser at his own expense.
- Before the expert arrives, you should make sure that there is an electric power supply, hot and cold water supply to test the work ability of the massage system.
- All communications (if they are where the bath will be placed) should be installed so as not to disturb the bath.
- To connect the siphon with sewerage, the sewer discharge (ø 50 mm) should be at floor level (or maximum 5 cm above the floor level) and maximum at 20 cm distance from the bath filling centre.
- In case you have a water mixer, rough cleaning filters should be installed for the bath, and under the bath hot and cold water outputs (1/2") should be installed.
- It's advisable that the connection is made by a qualified electrician. Massage bath should be connected to 230 V 50 Hz network with grounding. Cable should be chosen according to the capacity of each system. Cable connections need to be sealed.
- It's advisable to connect the bath through a separate 16-20 A differential fuse (MAX 0,03A). To connect the massage system, you need a 1.5 m long cable, leave a cable output of 3x2.5.

USAGE INSTRUCTION OF THE MASSAGE BATH

- Avoid from mechanic damages to the plumbing strong impacts and scratches.
- Do not turn on the water massage system, if the water level in the bath doesn't reach at least 2 cm above the nozzles. Massage systems Nr.4 and Nr.5 automatically turn off for several minutes after 15 minutes of use to prevent the engine from overheating.
- It's not advisable to use the massage systems with pneumatic control for more than 25 minutes without interruption.
- Avoid from foreign bodies entering the massage system.
- When the massage system is on, do not use soap and shampoo (to prevent sediments in the pipes of the massage system). You can add special fragrant salts and oils to the water that are meant to be used in massage baths (see descriptions on the packing).
- Avoid from foreign bodies entering the water discharge system!
- After use the massage bath should be rinsed with warm water. If necessary, you can wash the bath using a liquid cleaning agent and a soft cloth.
- Once a month you should clean the pipes of the massage system with a special cleaning agent.
- Chrome-plated details should be cleaned only with water (do not use chemical cleaning agents),

Electronic control of the massage system:

Air-massage system:

- Air nozzles are mounted in the base of the bath.
- ullet Air pump is switched on by pressing the button ${\mathfrak B}$
- Repeatedly pressing the button \$\mathbb{G}\$ the massage system is switched off
- Revolutions of air ump are adjusted with buttons **(a)** and **(b)**

Side and back water massage systems:

- Back and side water massage system is switched on pressing the button
- Pressing the button again, side and back massage system is switched off.
- Bath lights are turned on using the button (3)



Product size may deviate within +/- 1%

Ltd. "Vispool"

"Rožlejas", Olaine parish, Olaine district, Latvia
Tel. +371 67964202, fax +371 67964200, e-mail: info@vispool.lv
Service – tel. +371 28634890, e-mail: service@vispool.com