



5304



5305



5307



5308



5033

**5033**

**5304**


**5305**

**5307**

**5308**

## Directions of use

1. Set the temperature and water pressure with the single grip mixer. With the diverter **1** you can switch between overhead shower (**1**:1), hand shower (**1**:2) and body sprays (**1**:3).
2. The overhead lighting is switched on and off using the button above the diverter.

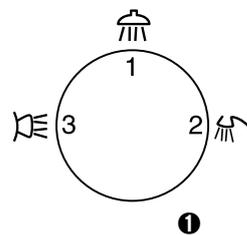

## Maintenance

1. Cleaning the shower cabin should be done using a soft cloth with cleaning agent. In order not to damage the shiny surface, pls do not use cleaning agents containing polish grains, acetone or ammoniac.
2. Lime deposits can be solved using a lime solvent.
3. Drains and spouts should be cleaned regularly to prevent stops.
4. Polish chromed parts with care.


## Package content

The shower cabin is delivered in two or three boxes, containing:

- Assembly guide
- Shower tray
- Glass front including 2 doors
- 2 cover strips
- Back wall
- Roof section
- Assembly bag
- Hand shower with hose

## Assembly preparation

1. For water supply, there are 2 flexible hoses of 1 m with R 1/2" inner grooves on the back of the shower cabin.
2. Water is drained by a 70 cm flexible plastic pipe **2**.
3. The overhead lighting shall be connected to a 230 V wall socket.

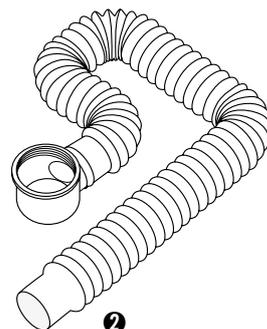

## Assembly guide

1. Put the tray in the desired place ❶ and adjust the feet until the tray is level and at the desired height. Use a water level. Tighten the bolts of the feet.
2. Put a string of wet silicone ❷ on the parts of the tray that will face the back wall. Put the back wall on the tray and fasten it with screws and nuts.
3. Put a string of wet silicone where the tray will face the glass front. Put the glass front on the tray.

**NOTE!** The arrows on the outside of the glass walls must point upwards.

4. The glass front is fitted along the round edge of the tray, with screw and nuts. ❸
5. Attach the cover strips on the edges of the glass wall doorway.
6. Attach the detachable front piece on the tray with the velcro strips and the snap fastening. ❹
8. Put a string of wet silicone on the top of the glass and back wall, where the roof section will face them. First screw the roof to the upper forward part of the glass front using screws and nuts. Then fasten the back part of the roof to the back wall with screws and nuts.
9. Tighten all screws that have been fitted so far.
10. Connect the hose from the overhead shower to the diverter. Attach with a hose clip. Connect the hand shower using a washer in both ends of the hoses.
11. Connect the flexible hoses (R ½" inner grooves) to the hot and cold water pipes of the house. Red mark for hot water and blue for cold.

If the water contains a lot of lime, a filter should be used to avoid problems.

12. Connect the cord from overhead lighting to the cord from the power box on the cabin backside ❺. Connect the cabin to a 230 V wall socket. Lamp: circular light tube 32W/54.
13. If needed, you can use more wet silicone when the cabin is assembled.



## Changing the light tube

Lamp: circular light tube 32W/54.

1. Unscrew the hose from the overhead shower. Then unscrew the locking nut that holds the overhead shower.
2. From inside the cabin, take out the overhead shower.
3. Then take off the plastic hood.
4. Take out the electric cable from the light tube.
5. Take out the light tube from the holders and insert the new light tube.